





DTAKIT (Emergency Assistance Alarm)

Single DTAKIT Installation Details

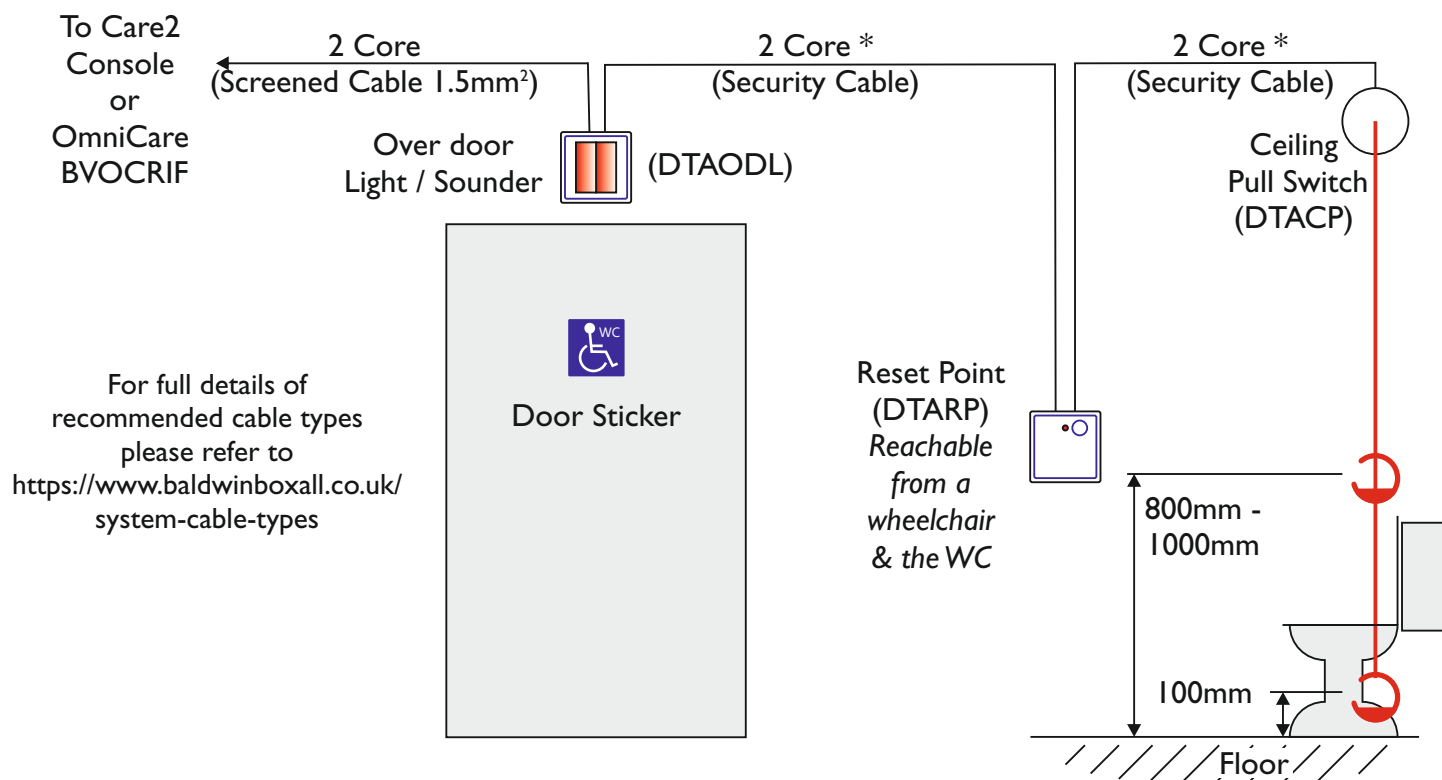

Single DTAKIT Connection Details

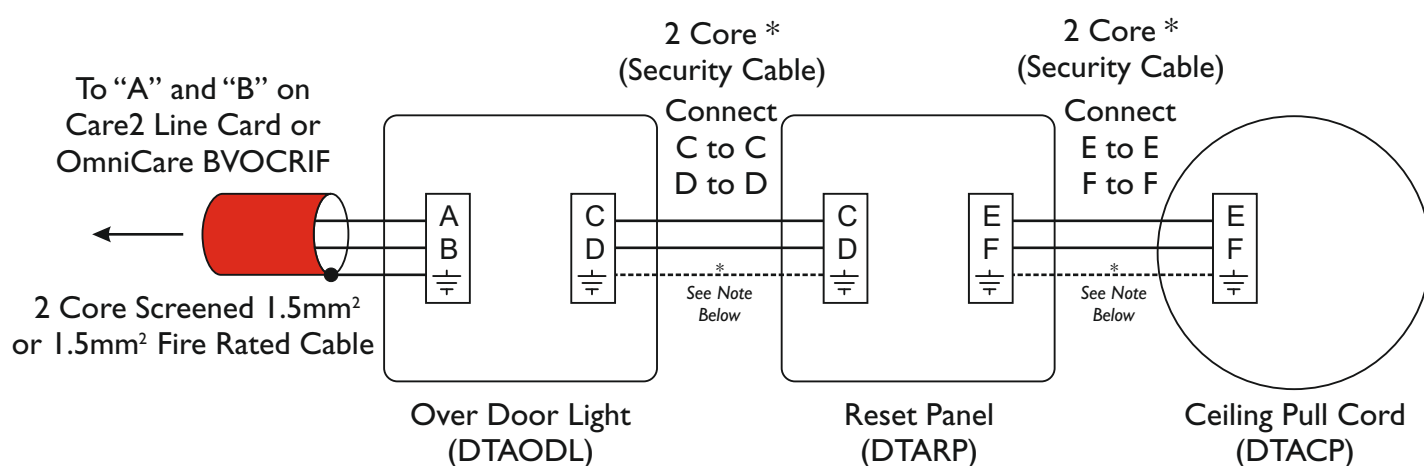

*The Safety Earth connection MUST be fitted if Stainless Steel front panels or metal back boxes are used.
Note: all connections between modules should use separate 2 core cables.

Multiple (maximum 2) DTAKIT Monitored Components


Detailed overleaf are the configurations of DTAKIT components that, when installed as shown above, meet the requirements of BS8300 and can be monitored for loss of connection.

A maximum of two DTACP units can be monitored per line on a Care2 Line Card or OmniCare BVOCRIF and activating either of the DTACP units will announce at the same location on the Control Panel.


There are many different modules available that can interface with the DTAKIT (e.g. additional "Call", "Reset", and "Combined" switches, however these may not be monitored or meet the requirements of BS8300. Refer to the relevant module instructions for connection details and compliance status.

For full details of recommended cable types (and maximum cable lengths) please refer to <https://www.baldwinboxall.co.uk/system-cable-types>.


MONITORED DTAKIT CONFIGURATIONS

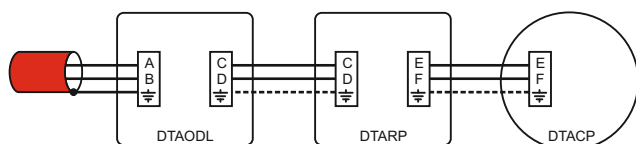


1 x DTAKIT

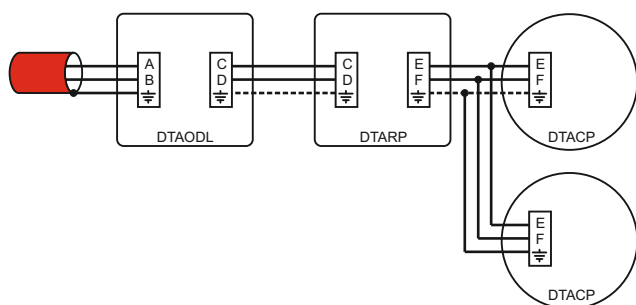


1 x DTAKIT &
1 x DTACP

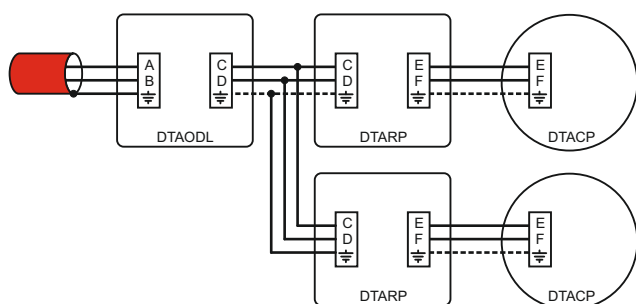


1 x DTAKIT &
1 x DTARP &
1 x DTACP

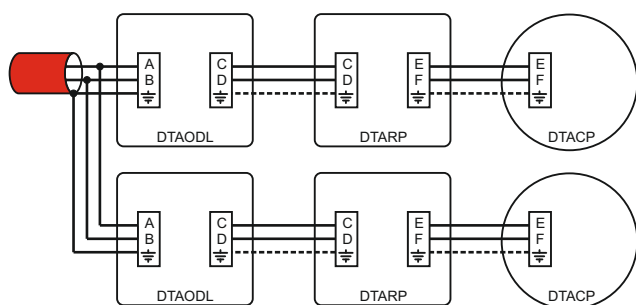

2 x DTAKIT

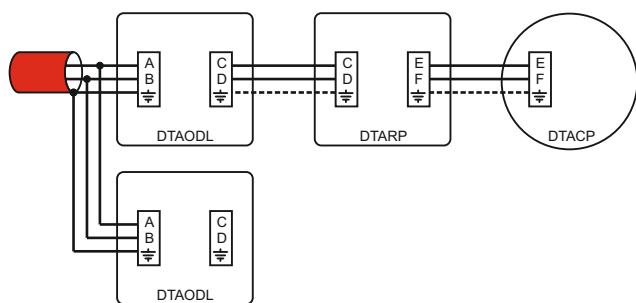

1 x DTAKIT &
1 x DTAODL

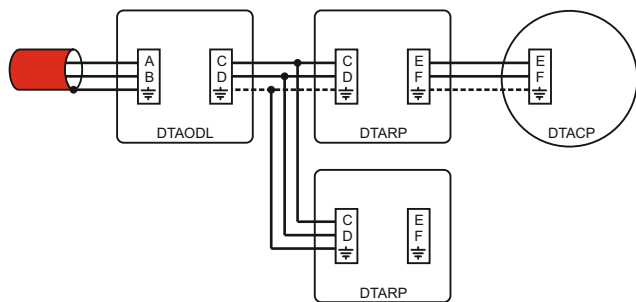

1 x DTAKIT &
1 x DTARP